

Zigbee 3.0 APP Control Instruction

1. Download and install [Tuva Smart] APP or

Search for [Smart Life] in Apple or Google store or scan following QR code to download and install the app.

Please click " Register " button to create account while using it in the first time, Log in directly if you already had account.



2. Connect to Smartphone


You must link the Tuya Zigbee 3.0 Gateway first to the smartphone. then add the zigbee controller to zigbee gateway for smartphone

(1). How to connect zigbee gateway to smartphone (Note: All Tuva Zigbee 3.0 gateway in market can works on our Zigbee controller; Here we use our wireless Zigbee 3.0 gateway

First, Power the zigbee gateway, and long press the "SET" button until the red indicating lamp blinking.




Second, when the red indicating lamp blink, open the Smart Life APP, and press "Add Device". It will discover the new device automatically, then Press "Add" to

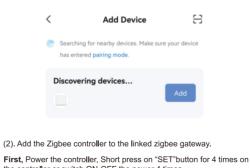

the controller or switch ON-OFF the power 4 times (ON-OFF-ON-OFF-ON), when the white light blink 10-15 seconds slowly means the controller come into smart link mode. (Note: Note: when the controller on the smart link mode, please finish the linking within 3 minutes, after 3 minutes, the controller will stop smart link mode, you need to do the above steps again).

Second, Press "Add new devices" on the APP, it will automatically find the ziabee device, then complete the linking. Added device will be displayed on the homepage after added successfully, then Click device you want to control to enter the control interface.

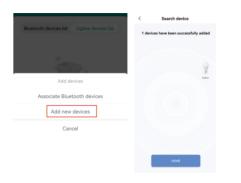

Note: Note: Our Zigbee 3.0 controller also works on Philips Hue Bridge and Samsung Smartthings gateway for smartphone controlling. Please read the Manual instruction of Hue Bridge or Smartthings Bridge if you want to control the device via Hue APP or Smartthings

Attention

- 1. Please check whether the input voltage of the constant voltage power supply is in accordance with the controller, and please check the connection of both the cathode and anode.
- 2. The working Voltage is DC5~24V, the controller will be broken if the voltage is higher than 24V.
- 3. Non-professional user cannot dismantle the controller directly, otherwise, it may cause fire and electric shock.
- 4. The working temperature(Ta) is-25~45°C; Do not use the device to direct sunlight, moist and other high temperature area
- 5. Please do not use controller around the mental area and high magnetic field, otherwise, it will badly affect the control distance
- 6. When the device load to 15A, wire diameter must be over 1.5mm².
- 7. When the device load over 10A, the connecting cable must be shorter than 40cm long from DC port to LED strip. 8. Please install the controller under good heat dissipation area.

