


65W 2CH Zigbee NFC Enabled LED Driver(Constant Current)



Important: Read All Instructions Prior to Installation

Function introduction

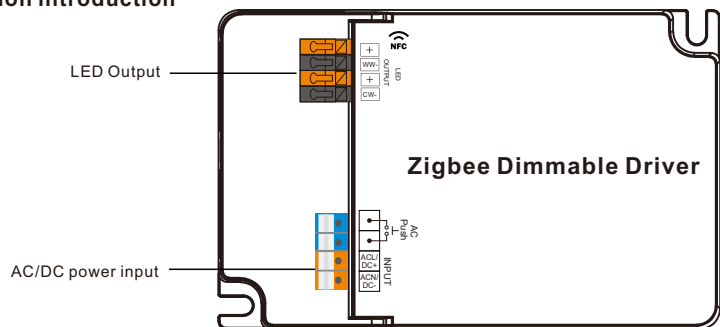

Product Data

| | | |
|---------|---------------------------|--|
| Output | LED Channel | 2 |
| | DC Voltage | 6-54V |
| | Current | 500-1500mA via NFC setting; Min.current gear lower to 0.1mA,Default 1050mA |
| | Current Accuracy | ±3% (±1% @ Certain full load) @ full load |
| | Rated Power | Max. 65W |
| Input | Voltage Range | 200-240VAC/200-240VDC |
| | Absolute Voltage Range | 176-264VAC/176-280VDC |
| | Frequency Range | 0/50/60Hz |
| | Power Factor (Typ.) | > 0.98 @ 230VAC Full load |
| | Total Harmonic Distortion | THD ≤ 6% (@ full load / 230VAC) |
| | Efficiency (Typ.) | > 90% @ 230VAC full load |
| | AC Current (Typ.) | 0.4A @ 230VAC |
| | Inrush Current (Typ.) | Max. 9.68A at 230VAC; 70µs duration |
| | Leakage Current | < 5mA / 230VAC |
| | Standby Power Consumption | < 0.5W |
| Control | Anti Surge | L-N:2KV |
| | Dimming Interface | Zigbee |
| | Dimming Range | 0.01%-100% @ Max current |
| | Dimming Method | Amplitude/CCR dimming |
| | Dimming Curve | Linear/ Logarithmic optional |

| | | |
|--------------|--------------------------|--|
| Protection | Short Circuit | Yes, remove the fault conditions and re-power the device |
| | Over Current | Yes, remove the fault conditions and re-power the device |
| | Over Temperature | Yes, remove the fault conditions and re-power the device |
| Environment | Working Temp. | -25°C ~ +45°C |
| | Max. Case Temp. | TC=85°C (Ta= "45°C") |
| | Working Humidity | 10% ~ 95% RH non-condensing |
| | Storage Temp. & Humidity | -40°C ~ +80°C, 10% ~ 95% RH |
| Safety & EMC | Safety Standards | EN61347-1, EN61347-2-13 |
| | Withstand Voltage | I/P-O/P: 3.75KVAC |
| | Isolation Resistance | I/P-O/P: 100M Ohms / 500VDC / 25°C / 70% RH |
| | EMC Emission | En55015, EN61000-3-2, EN61000-3-3 |
| | EMC Immunity | En61547, EN61000-4-2,3,4,5,6,8,11 |
| Others | MTBF | 191350H, MIL-HDBK-217F @ 230VAC full load and 25°C ambient temperature |
| | Dimension | 123.9x78.8x30mm (L*W*H) |
| | Warranty | 5 Years |
| | | |

- Dimmable LED driver, ZigBee device based on ZigBee 3.0 protocol
- Dimmable LED driver. Max. output power 65W
- 500-1500mA current selectable via NFC program tool. Min.current gear lower to 0.1mA
- Dimming curve/Power on state/Soft start/Soft off via NFC program tool.
- Class II power supply, full isolated plastic case
- High power factor and efficiency
- PUSH DIM function enabled
- Able to On/Off and control LED lighting luminaries' brightness and color temperature
- Amplitude/CCR dimming, smooth and deep dimming
- ZigBee end device that supports Touchlink commissioning
- Can directly pair to a compatible ZigBee remote via Touchlink
- Supports find and bind mode to bind a ZigBee remote
- Supports zigbee green power and can bind max. 20 zigbee green power switches
- Compatible with universal ZigBee gateway products
- Waterproof grade: IP20, suitable for indoor LED lighting applications
- 5 years warranty

Safety & Warnings

- DO NOT install with power applied to the device.
- DO NOT expose the device to moisture.

Operation--Zigbee Network

1. Do wiring according to connection diagram correctly.


2. This ZigBee device is a wireless receiver that communicates with a variety of ZigBee compatible systems. This receiver receives and is controlled by wireless radio signals from the compatible ZigBee system.

3. Zigbee Network Pairing through Coordinator or Hub (Added to a Zigbee Network)

Step 1: Remove the device from previous zigbee network if it has already been added to, otherwise pairing will fail.

Step 2: From your ZigBee Controller or hub interface, choose to add lighting device and enter Pairing mode as instructed by the controller.

Step 3: power on the device, it will be set into network pairing mode (connected light flashes twice slowly), the network pairing mode will last until the device is added to a zigbee network.

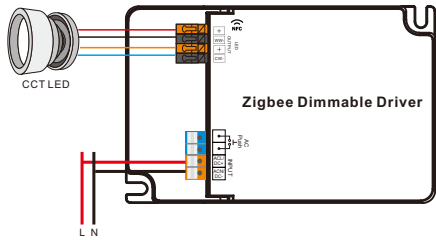


Step 4: Connected light will blink 5 times and then stay solid on, then the device will appear in your controller's menu and can be controlled through controller or hub interface.

4. TouchLink to a Zigbee Remote

Step 1: Method 1: re-power on the device 4 times to start Touchlink commissioning immediately, 180S timeout, repeat the operation.

Method 2: If the device is already added to a network, it will be set into Touchlink commissioning immediately, 180S timeout, re-power on the device to set it into touchlink commissioning again.

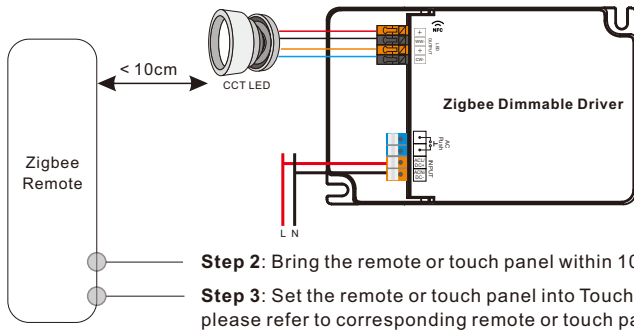


Step 2: Bring the remote or touch panel within 10cm of the lighting device.

Step 3: Set the remote or touch panel into Touchlink commissioning, please refer to corresponding remote or touch panel manual to learn how.

Step 4: There shall be indication on the remote for successful link and connected light will flash twice.

- Note:**
- 1) Directly TouchLink (both not added to a ZigBee network), each device can link with 1 remote.
 - 2) TouchLink after both added to a ZigBee network, each device can link with max. 30 remotes.
 - 3) To control by both gateway and remote, add remote and device to network first then TouchLink.
 - 4) After TouchLink, the device can be controlled by the linked remotes.


5. Removed from a Zigbee Network through Coordinator or Hub Interface

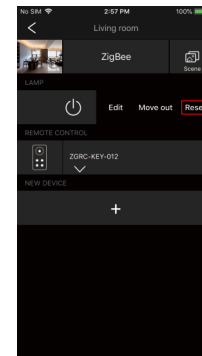

From your ZigBee controller or hub interface, choose to delete or reset the lighting device as instructed. The connected light blinks 3 times to indicate successful reset.

6. Factory Reset Manually

Step 1: Enable Pairing via NFC App or re-power on the device for 5 times continuously .

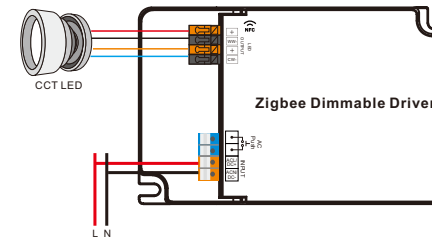


Step 2: Connected light will blink 3 times to indicate successful reset.

- Note:**
- 1) If the device is already at factory default setting, there is no indication when factory reset again .
 - 2) All configuration parameters will be reset after the device is reset or removed from the network.

7. Find and Bind Mode

Step 1: Re-power on the device (initiator node) 3 times to start Find and Bind mode (connected light flashes slowly) to find and bind target node, 180 seconds timeout, repeat the operation.

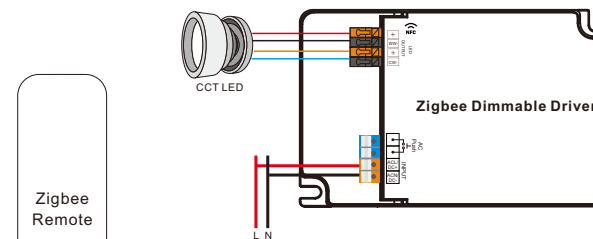


Step 2: Set the remote or touch panel (target node) into find and bind mode, and enable it to find and bind initiator, please refer to corresponding remote or touch panel manual.

Step 3: There shall be indication on the remote or touch panel that it bind the device successfully and can control it then.

8. Learning to a Zigbee Green Power Switch

Step 1: Re-power on the device 4 times to start Learning to GP switch mode (connected light flashes twice), 180 seconds timeout, repeat the operation.

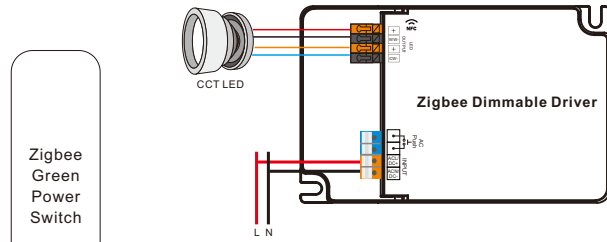


Step 2: Set the green power switch into Learning mode, please refer to its manual.

Note: Each device can learn to **max. 20 zigbee green power switches.**

Step 3: Connected light will flash twice to indicate successful learning. Then the switch can control the device.

9. Delete Learning to a Zigbee Green Power Switch

Step 1: Re-power on the device 3 times to start delete Learning to GP switch mode (connected light flashes slowly), 180 seconds timeout, repeat the operation.

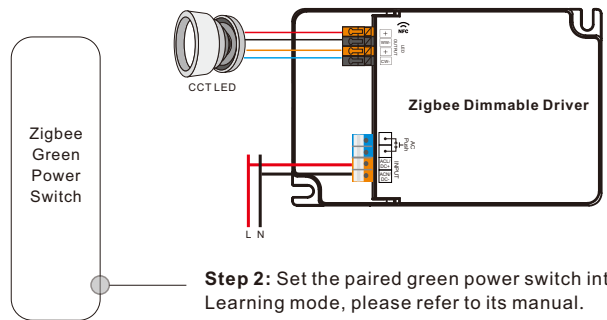

Step 2: Set the paired green power switch into Learning mode, please refer to its manual.

Step 3: Connected light will flash 4 times to indicate successful deleting.

10. ZigBee Clusters the device supports are as follows:

Input Clusters

- 0x0000: Basic
- 0x0003: Identify
- 0x0004: Groups
- 0x0005: Scenes
- 0x0006: On/off
- 0x0008: Level Control
- 0x0300: Color Control
- 0x0b05: Diagnostics



Output Clusters

- 0x0019: OTA

11. OTA

The device supports firmware updating through OTA, and will acquire new firmware from zigbee controller or hub every 10 minutes automatically.

Function setting Via "SR NFC TOOL"

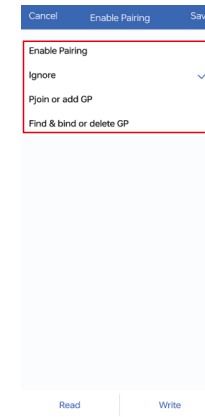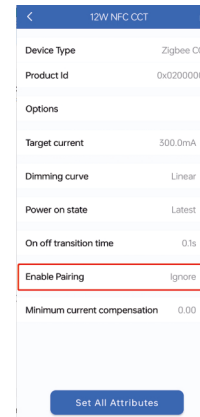

4 Different settings.

1) Enable Pairing

- Enable the Zigbee NFC drivers enter the pairing mode and add it into the Zigbee network.
- Factory reset. Enable the configured Zigbee NFC driver into configuring mode.
- Besides, you can re-power the device 5 times to enable this section as well.

2) Ignore

- Remember, once you need to write other parameters into the NFC driver, you should select this section, so as not to change the driver's state.

3) Pjoin or add GP

- This section as known as "Enable Touchlink & GP mode".
- Select this section and write it into the Zigbee NFC driver, the driver will enter Touchlink mode and GP Mode.

Note: You can both have Touchlink and GP functions as long as you matched with Touchlink function first.

- Besides, you can re-power the device 4 times to enable this section as well.

4) Find & bind or delete GP

- This section as known as "Enable Find&Bind / Delete GP".
- Select this section and write it into the Zigbee NFC driver, the driver will enter Find&Bind mode, and it will delete previous GP bonding.
- Besides, you can re-power the device 3 times to enable this section as well.

With NFC Programming devices

Note


1) Do wiring according to the wiring diagram .

2) Recommend setting parameters without power-on devices .

2) Please make sure your mobile phone has NFC function and enable it .


Working with “SR NFC Tool” APP

Step 1: Download the APP (searching “SR NFC Tool” from App Store and Google Playstore) . Then open the APP .

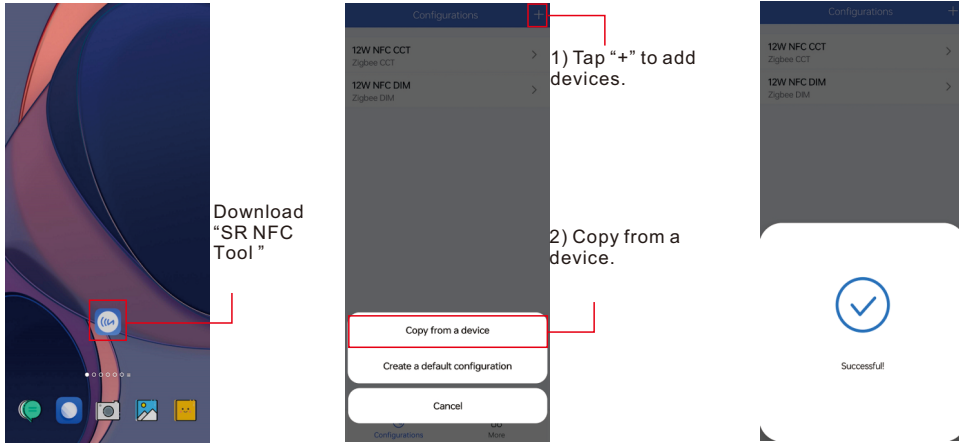


- Note:**
1. Please Make sure that you have enabled NFC function with your mobile phone/ tablet .
 2. Please Make sure that the “NFC position” is matched.
 3. Please do not power on the device before setting.
 4. If you can't download “SR NFC Tool”. Please contact with us.

Step 2: Add device, and name it as you wish.

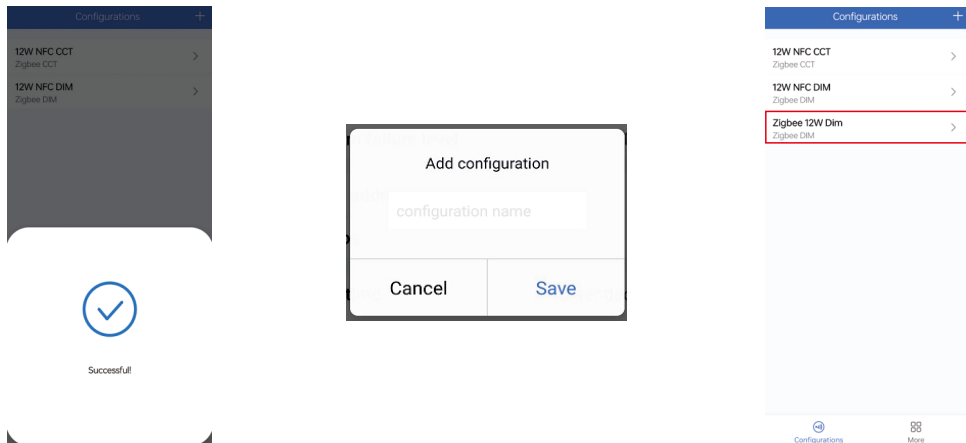


Step 3: Unlock device, enter parameters configuring page.


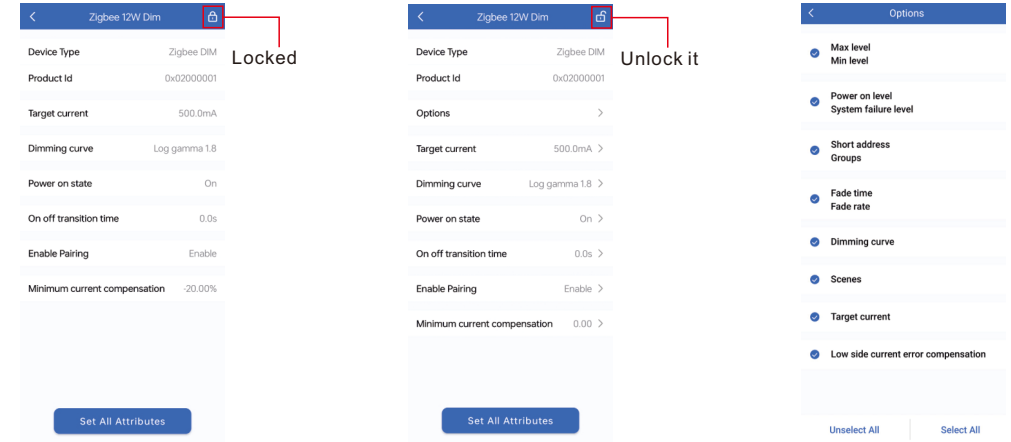


- Note:**
1. You have to unlock the device then do some settings
 2. Only when the corresponding function is selected, the function interface will be displayed.

Step 4: Few parameter interface, you can choose the setting based on your requirements.

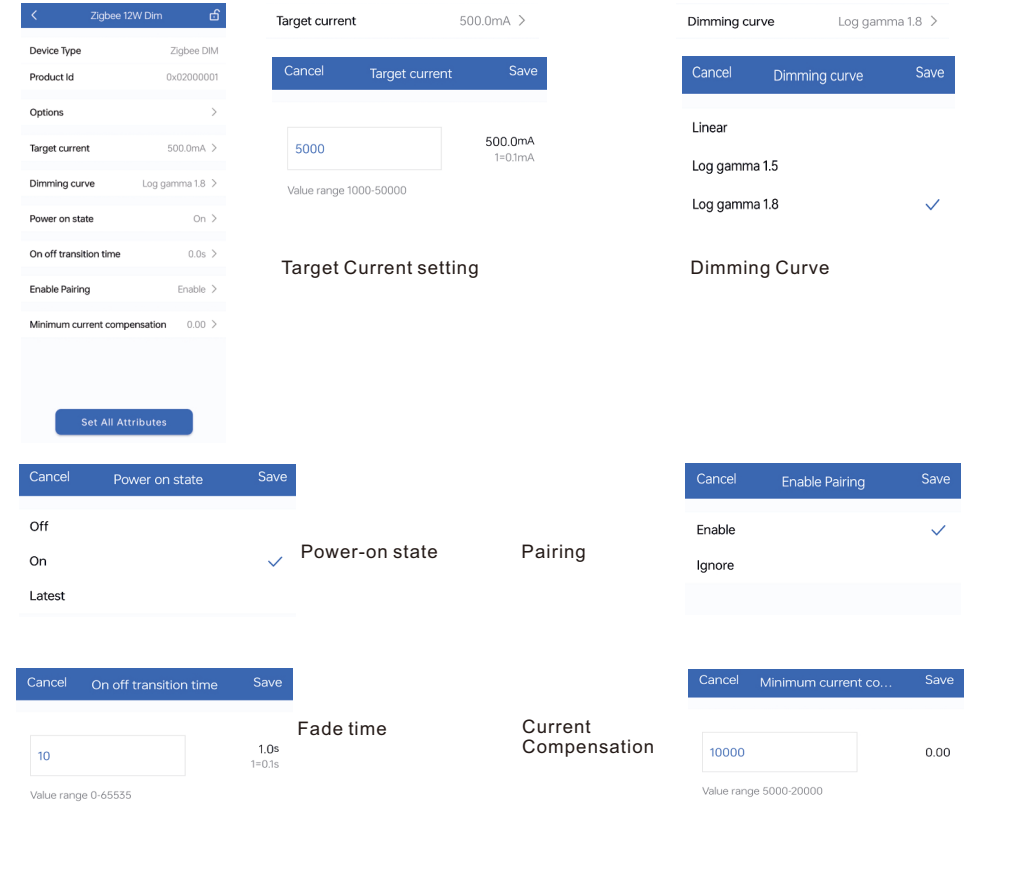

Step 5: After setting, please save the selected configuration via NFC and power on the device.

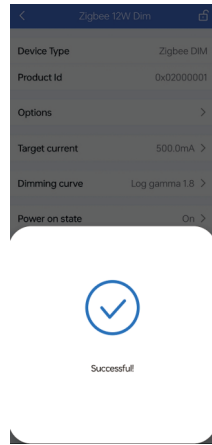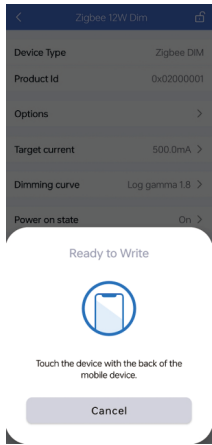


Tips

1. NFC function doesn't require any power driver.
2. Many functions can be configured by NFC. Kindly check your desired functions.
3. You can create a default profile with the "+" button.


Wiring Diagram

Application 1 (Without PUSH)

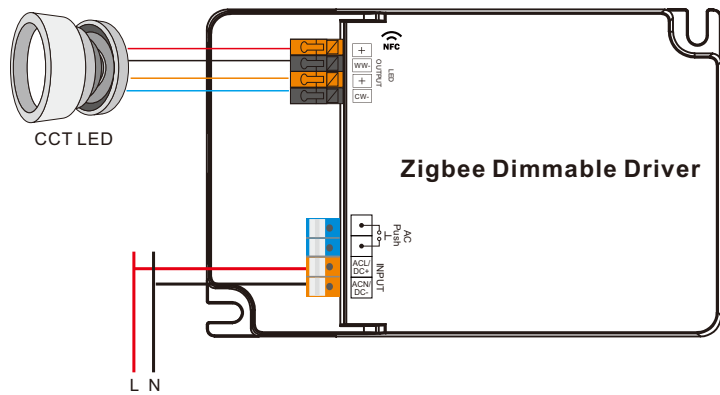


Note: Available with 3-wire CCT luminaries as well


Application 2 (With PUSH)

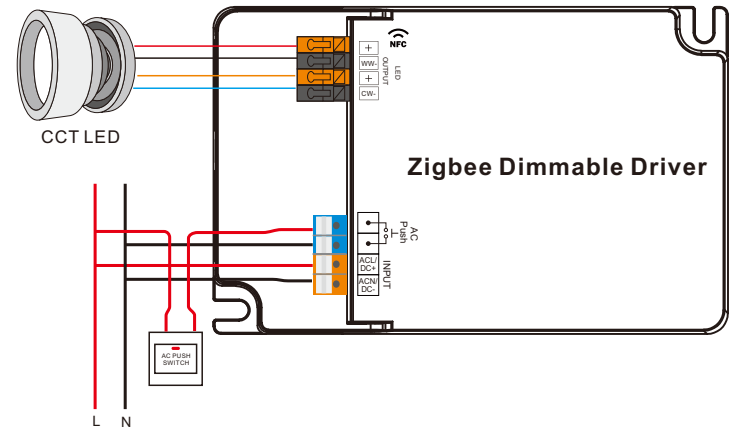


Product Dimension

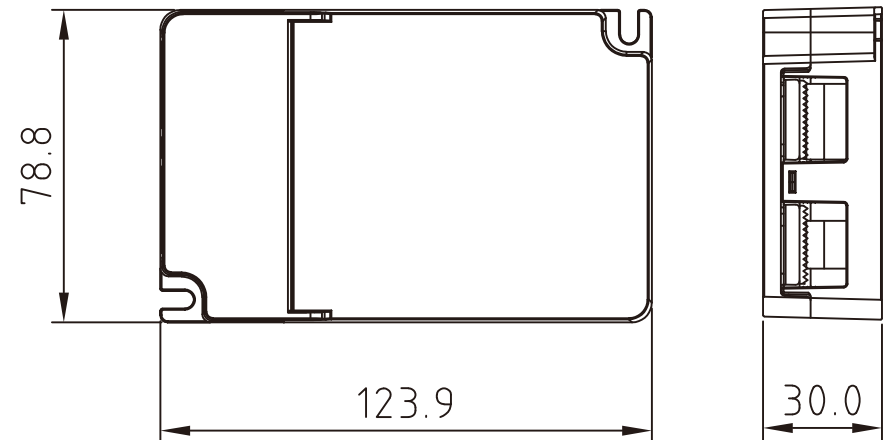

Operating window

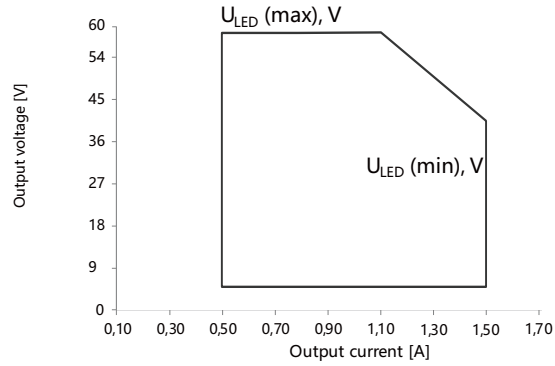


Dimming Curve

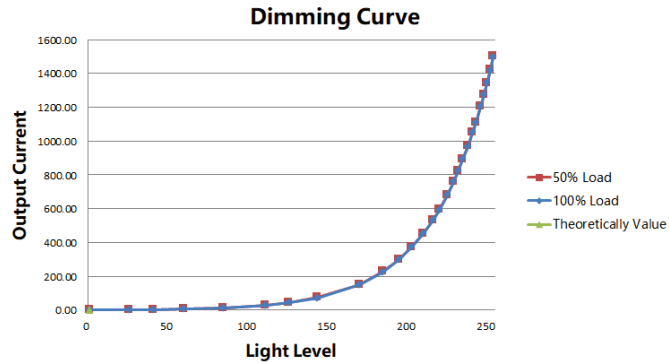

Note: Test data under 1500mA gear


Driver Performance

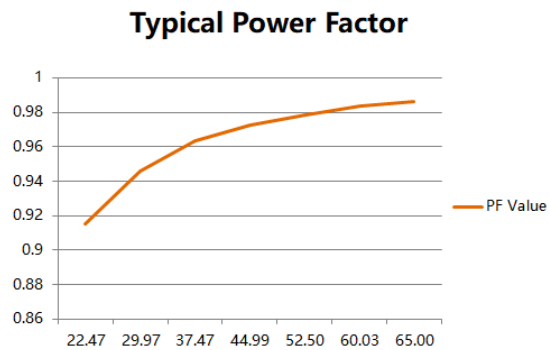

Note: Test data under 1500mA gear

Driver Performance


Typical Efficiency

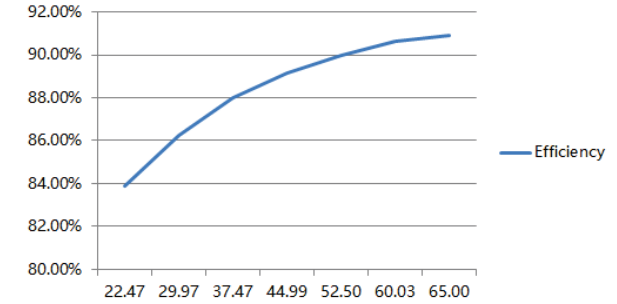

Note: Test data under 1500mA gear

MCB Load Quantity

| Module Number | I _{peak} | T _{width} | Max. quantity of LED Driver per MCB | | | | | | | | | | | | | | |
|---------------------------|-------------------|--------------------|-------------------------------------|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| | | | B10 | B13 | B16 | B20 | B25 | C10 | C13 | C16 | C20 | C25 | D10 | D13 | D16 | D20 | D25 |
| SRP-ZG9105N-65CC500-1500 | 9.68A | 70μs | 15 | 20 | 24 | 30 | 38 | 20 | 26 | 32 | 40 | 50 | 22 | 29 | 36 | 45 | 57 |
| SRP-ZG9105N-65CCT500-1500 | 9.68A | 70μs | 15 | 20 | 24 | 30 | 38 | 20 | 26 | 32 | 40 | 50 | 22 | 29 | 36 | 45 | 57 |

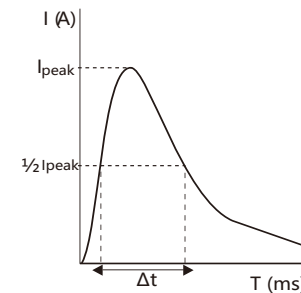

Note:

- 1.Those MCB parameters are based on ABB S200 series circuit breakers.
- 2.For different brands and models of miniature circuit breakers, the quantity of drivers will have difference.
- 3.Please do not exceed the above-mentioned quantity during on-site installation, and the specific load quantity shall be subject to on-site installation.
- 4.When the installation environment temperature of MCBs exceeds 30°C or when multiple MCBs are installed side by side, the number of mounted drives will be reduced, which requires recalculation.
- 5.Type C MCB's are strongly recommended to use with LED lighting

Update log

| Date | Version | Update content | Update by |
|-----------|---------|-----------------|-----------|
| 2023-9-28 | V1.0 | Initial Version | Romeo |

Note: Subject to change without notice. Please contact us if you have any questions.